

4" and 6" Square 5CCT Slim LED Flat Panel Installation Instructions

The units covered in these instructions are intended to retrofit Type IC or Type Non-IC luminaries.

WARNING / ATTENTION

1. Risk of fire. Supply conductors (power wires) connecting to the fixture must be rated 90° C. If uncertain, consult an electrician.
2. Risk of fire or electric shock. LED Retrofit Kit installation requires knowledge of luminaries electrical systems.
3. Risk of fire or electric shock. If not qualified, do not attempt installation. Contact a qualified electrician.
4. Risk of fire or electric shock. Install this kit only in the luminaires that have the construction features and dimensions shown in the photographs and/or drawings.
5. To prevent wiring damage or abrasion, do not expose wiring to edges of sheet metal or other sharp objects.
6. This lamp is not intended for use with emergency exit fixtures or emergency lights.

CAUTIONS

1. For your safety read and understand instructions completely before starting installation.
2. Before attempting installation, check your local electric code, as it sets wiring standards for your locality.

NOTES


1. If luminaire (fixture) is to be switched from a wall switch, make sure black power supply wire is connected to the switch. DO NOT connect the white supply wire to the switch.
2. Make sure no bare wires are exposed outside the wire nut connectors.
3. Do not make or alter any open holes in an enclosure of wiring or electrical components during kits installation.

Hole Cutout Dimensions

Model	Hole Cutout Dimensions (inches)	Hole Cutout Dimensions (mm)
MRL- S40905S	4.25" x 4.25"	108 x 108
MRL- S61245S	6.20" x 6.20"	157 x 157

Parts List

- 1 DRIVER/JUNCTION BOX
- 2 LIGHT PANEL
- 3 SPRING-LOADED CLIPS
- 4 CONNECTOR

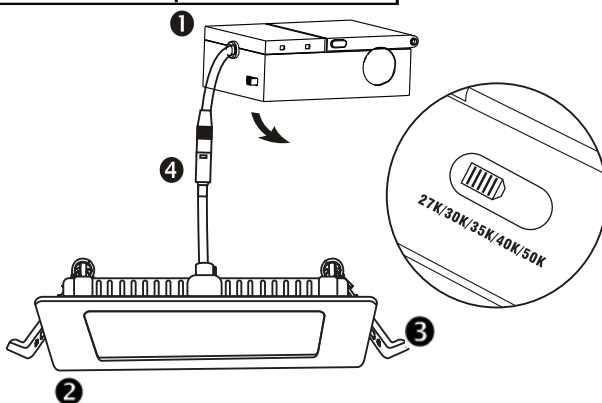


Electrical parameters:

Model	Driver/Junction Box Input Voltage (V)	Input Frequency (Hz)	Input Current (A)	Input Watts (W)
MRL- S40905S	120	60	0.09	10
MRL- S61245S	120	60	0.10	12

Installation Guide:

1. Turn off the power before installation. Remove the existing fixture if applicable.
2. Determine the location and necessary hole cutout diameter using the supplied table and cut the ceiling hole with the listed approximate diameter. (Fig. 1)
3. Open the DRIVER/JUNCTION BOX cover and remove the appropriate knockout(s) on the side panel (Fig. 2). Install the appropriate cable clamp(s) (not included) and insert the electrical supply cable through the cable clamp. Connect the ground wire to the green wire terminal, hot wire to the black wire terminal and neutral wire to the white wire terminal using the wire nuts provided.

Fig. 1

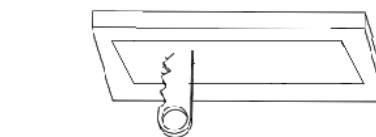

4. Place all wiring and connections back into the box and close the cover. Connect the DRIVER/JUNCTION BOX to the light panel using the Connector.
5. Use the CCT selector switch on the outside of the DRIVER/JUNCTION BOX (Fig. 2) to select the desired CCT color of the light.
6. Insert DRIVER/JUNCTION BOX through the mounting hole (Fig. 3) and secure using mounting tabs.
7. Push the SPRING-LOADED CLIPS into the mounting hole upwards and insert LIGHT PANEL into it. Release the clips and the fixture will be pulled flush to the ceiling. (Fig 4)

Fig. 2

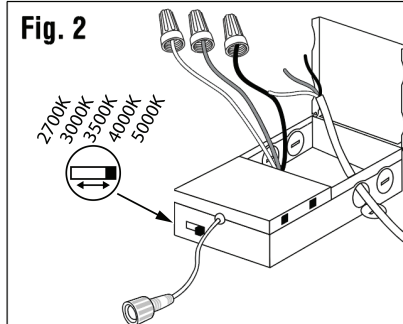


Fig. 3


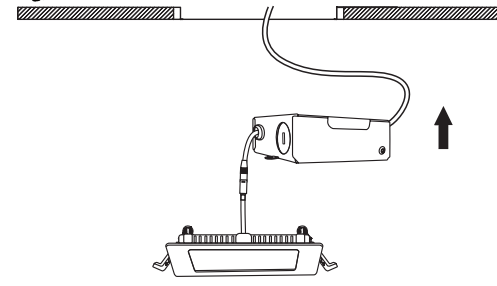


Fig. 4

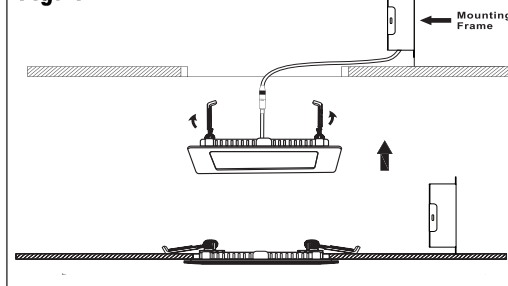

Three Year Warranty:

Maxxima extends a 3 year limited warranty to the original purchase that the products listed are free from defects in material and/or workmanship only. Maxxima will replace any warranted product to the original consumer/purchaser if the product fails because of defects due to workmanship and/or materials within the limited warranty period. Limited warranty is not transferable and applies to the original installation of the Maxxima product. This offer does not constitute in any way a product guarantee and Maxxima does not hereby assume any obligation whatsoever beyond sending a free replacement product.