

MCL-3101400SN Instruction Sheet

WARNING

1. Risk of fire. Supply conductors (power wires) connecting to the fixture must be rated 90°C. If uncertain consult an electrician.
2. Risk of fire or electric shock. If not qualified, do not attempt installation. Contact a qualified electrician.
3. To prevent wiring damage or abrasion, do not expose wiring to edges of sheet metal or other sharp objects.
4. Make sure no bare wires are exposed outside the wire nut connectors.

NOTES

1. For your safety read and understand instructions completely before starting installation.
2. Before attempting Installation, check your local electric code, as it sets wiring standards for your locality.
3. Suitable for use in damp locations.
4. Reliable operating temperature is -20°C (-4°F) to 40°C (104°F).

Approved Dimmers

Maxxima: MEW-DM600, MEW-DM620, MEW-DM650

Leviton: 6631, 6674, DSL06-1LZ, TSL06-1LW

Lutron: SCL-153P, CTCL-153P, S-600P, S-600, PD-6WCL, DVCL-153P, AYCL-153P-WH, AYCL-600PNL-AL,


GE: 10464

Product Specification

P/N	Wattage (W)	Voltage (V)	Rated Input Frequency (Hz)	Dimension (DxH)
MCL-3101400SN	14 W	AC 120V	50/60Hz	10" x 2.5"

Installation Guide

1. Make sure POWER is turned OFF at the circuit breaker box or remove fuse.
2. Insert the mounting screws (2) into Junction Box as shown below.
3. Make the following wiring connections:
 - a. Connect the white wire from the fixture to the NEUTRAL wire in the box (typically white).
 - b. Connect the black wire from the fixture to the HOT wire in the box (typically black).
 - c. Connect the bare copper wire from the fixture to the GROUND wire in the box (typically bare copper).
4. Align the slots on the fixture base (7) to the mounting screws (2) in the Junction Box.
5. Secure the fixture base in place by tightening the mounting screws.
6. Attach the dome (8) to the fixture base (6) by aligning the decorative ring (9) and tightening it using the decorative nuts(10).
7. Turn power ON at circuit breaker (or replace fuse) and confirm that the fixture is functioning properly.

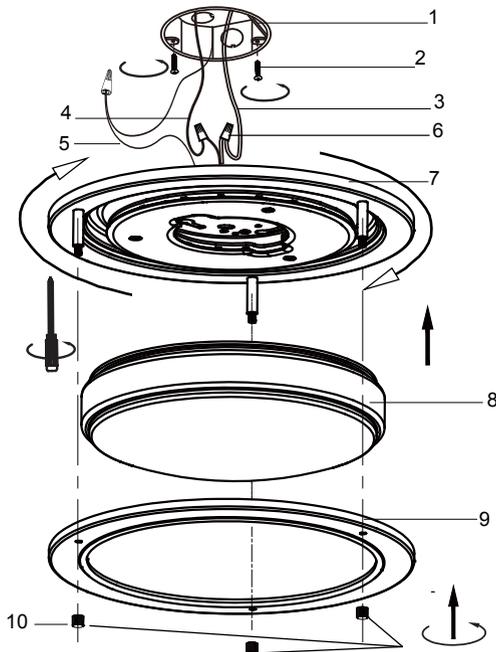

- 1) Junction Box (not included)
- 2) Fixture Mounting Screws (2 pieces)
- 3) White Fixture Wire
- 4) Black Fixture Wire
- 5) Fixture Ground Wire
- 6) Wire Nut (3 pieces)
- 7) Fixture Base
- 8) Dome
- 9) Decorative Ring
- 10) Decorative Nuts (3 pieces)

Three Year Warranty

Maxxima extends a 3 year limited warranty to the original purchase that the products listed are free from defects in material and/or workmanship only. Maxxima will replace any warranted product to the original consumer/purchaser if the product fails because of defects due to workmanship and/or materials within the limited warranty period. Limited warranty is not transferable and applies to the original installation of the Maxxima product. This offer does not constitute in any way a product guarantee and Maxxima does not hereby assume any obligation whatsoever beyond sending a free replacement product.