



## 6" Round and Square Anti-Glare Installation Guide

MRL-S61505, MRL-S61505B, MRL-S61505S, MRL-S61505SB

www.maxximastyle.com

### ⚠ WARNINGS ⚠

- Risk of electric shock - Disconnect power at the source before installation.
- If you are unsure about the installation or the maintenance of the fixture, please consult an electrician.
- Do not make or alter any holes in the wiring enclosure or modify any electrical componentry.

### CAUTIONS

- The fixture must be wired in accordance with the National Electric Code (N.E.C) standards and any applicable local codes or ordinances.
- Supply conductors must at least be rated for 90°C/194°F.
- This fixture is designed for use with 120Vac, 50/60Hz only.

## INSTALLATION INSTRUCTIONS

1. Ensure the power has been turned off by switching the circuit breaker to the off position or by removing the fuse from the fuse panel.
2. After marking the center point of where the fixture will be located, using the provided template cut the required hole shown in figure 1 which is 140mm or approximately 5.5".
3. Open the junction box, remove the desired knockout and attach a twin screw clamp connector (or similar).
4. Insert the supply wire through the twin screw clamp connector (or similar) shown in figure 2a.
5. Connect the hot (black) wire to the black wire, the neutral (white) wire to the white wire and the ground (green/bare copper) wire to the green wire using the provided wire nuts shown in figure 2.
- 5a. **Optional** - Using the selector switch on the side of the metal junction box the CCT can be changed to any of the five settings (CCT settings are 2700K/3000K/3500K/4000K/5000K).
6. Put all of the wires into the metal junction box and close the junction box.
- 6a. **Optional** - using a screw (not provided), the junction box can be mounted using the holes in the back of the junction box.
7. Connect the male output connector from the junction box with the female connector from the fixture and tighten the locking nut.
8. To insert the fixture into the hole, hold the two spring clips in the vertical position until the springs are past the top of the ceiling material shown in figure 4.
9. Push the fixture up until flush with the ceiling shown in figure 5.
10. Installation is now complete, restore power and the fixture is now operational.

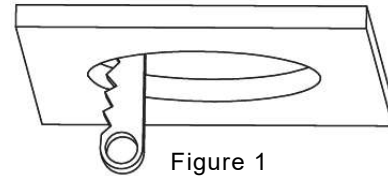


Figure 1

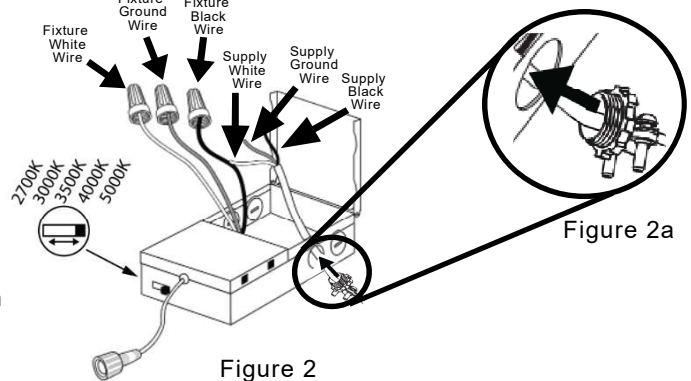


Figure 2

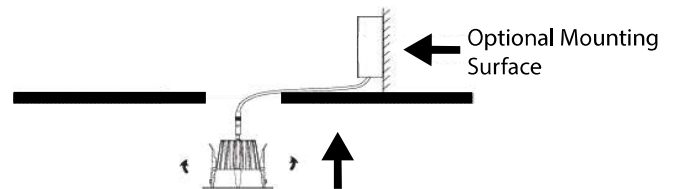


Figure 4



Figure 5

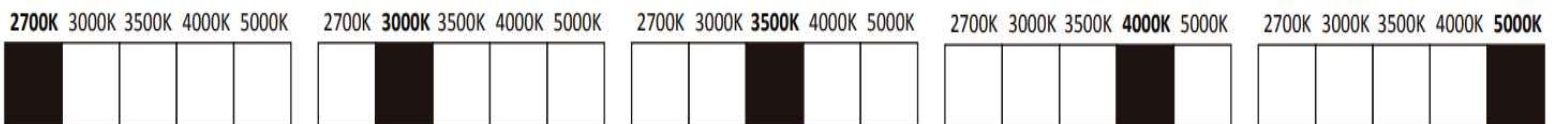


Figure 6

## 3 YEAR WARRANTY

Maxxima extends a 3 year limited warranty to the original purchase that the products listed are free from defects in material and/or workmanship only. Maxxima will replace any warranted product to the original consumer/purchaser if the product fails because of defects due to workmanship and/or materials within the limited warranty period. Limited warranty is not transferable and applies to the original installation of the Maxxima product. This offer does not constitute in any way a product guarantee and Maxxima does not hereby assume any obligation whatsoever beyond sending a free replacement product.